Quick Start

SANYO

FWDV225F

Accessories



Owner's Manual



Audio / video cables

Quick Start Guide



Remote Control (NB694UH) with AA (1.5 V) battery × 2

Basic DVD/VCR Connection

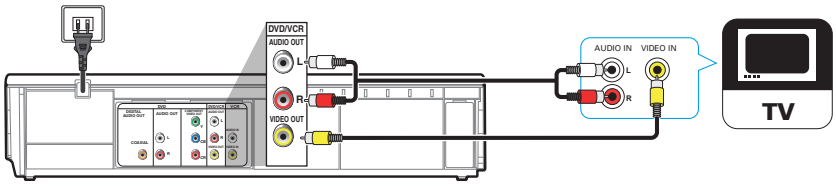

If your TV does not have RCA input, you need to purchase RF Modulator for connection.

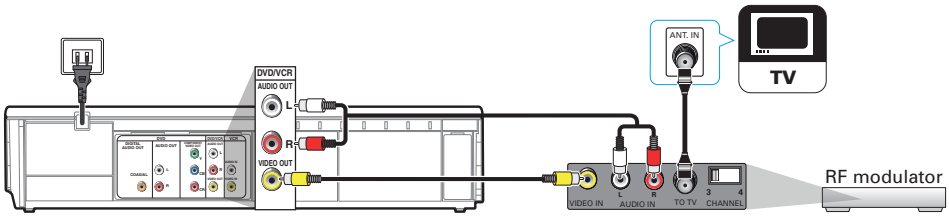

VCR Head Cleaning

Purchasing and using a VCR head cleaning kit will ensure the best picture quality for playback and recording.

	DVD	VCR
Playback	✓	✓
External Tuner Recording	–	✓
DVD ➡ VCR Recording	–	–
VCR ➡ DVD Recording	–	–
Built in TV Tuner	–	–

Recording

This unit has no tuner system so it cannot receive TV broadcasts without an RF Modulator, external tuner or such devices.



1 Press ⏻ to turn On the unit. Then insert a recordable tape.

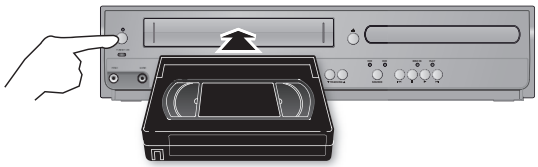

2 Press VCR to switch to the VCR mode.

3 Press INPUT until "L1" or "L2" is displayed on the TV screen. Select "L1" to activate rear input jacks. Select "L2" to activate front input jacks.

4 Press SPEED to select the desired tape speed.

Tape speed	Recording / playback time		
Type of tape	T60	T120	T160
SP mode	1hour	2hours	2-2/3hours
SLP mode	3hours	6hours	8hours

5 Press REC repeatedly until desired recording duration is selected.

6 To stop recording temporarily, press PAUSE.

7 Press STOP to stop recording.

8 Press OPEN/CLOSE to eject the recorded cassette tape.

Need help?

Owner's Manual For assistance with setup please check the Owner's Manual, that came with the unit.

Online Support Go to: **sanyo-av.com**

Phone Support Call **1-866-212-0436** for our customer support.

SANYO is a registered trademark of SANYO Electric Co., Ltd. and is used by Funai Electric Co., Ltd. and Funai Corporation, Inc. under license from SANYO Electric Co., Ltd.

Any liability related to SANYO products, including design and quality, is the sole responsibility of Funai Electric Co., Ltd. and Funai Corporation, Inc.
Please contact Funai Corporation, Inc. for any questions or claims related to SANYO products:
1 866 212 0436 sanyo-av.com

* 2 V M N 0 0 1 9 3 *

Printed in China
E8R6BUH
2VMN00193 ★★★★★